

ME 3030B

Dual Function - Gauss/Tesla meter for AC electric and AC magnetic fields 16 Hertz to 2 Kilohertz



Manual

Please read this manual carefully before you start using this instrument. The manual contains important information for the safety, usage and maintenance of this meter.

Instruments of the ME 3 series from GIGAHERTZ SOLUTIONS[®] set new standards in low frequency ac field measuring technology. Gigahertz Solutions has created professional technology at an outstanding price/performance ratio, possible only through innovative and patented control elements, as well state of the art manufacturing processes.

The ME3030B allows you a qualified evaluation of the exposure caused by AC electric and AC magnetic fields, according to the internationally recognized, compulsory measuring methods for workstations (TCO/MPR). It also complies with the recommendations of building, and electro-biology in the frequency range 16 Hz up to 2 kHz.

The ME3030B is compliant with CE - guidelines.

We thank you for the confidence you have shown in buying a ME3030B, and we are convinced it will meet your expectations.

Contents

	Page
Safety instructions	2
Preparation for taking measurements	3
Instructions - AC electric field measurements	3
Instructions - AC magnetic field measurements	5
Battery, Tone, Support, more products	7
Technical data	8

Safety Instructions:

It is imperative to carefully study the instruction manual prior to using the field meter. A great deal of important information regarding safety and maintenance is included.

The grounding of the field meter required for the electric field measurements should be performed with the supplied grounding lead which can be connected to unpainted water, gas or heating pipes. If there are none of the above-mentioned grounding options available, a licensed electrician could temporarily make use of the grounding conductor in a grounded outlet. In this case, however, an electric shock hazard may occur when the grounding clip touches the current-carrying phase conductor. (A grounding rod for outdoor use is available at www.enviratest.com).

To prevent shock hazards or the destruction of the field meter, neither the instrument itself nor the adapter should ever come into contact with water. The penetration of water into the case may lead to the destruction of the electronics inside. Field meters are not to be stored outdoors or exposed to rain. Clean only the outside of the case, using a damp moist cloth. Do not use cleaners or sprays.

Prior to cleaning the field meter or opening the case, shut it off and unplug all extension cords. There are no user-serviceable parts inside the instrument.

Due to the high sensitivity level, the electronics of the field meter are very sensitive to heat and impact, and touch. Therefore, the instrument should not be left in the sun, on a heating element or facsimile. The meter should not be dropped and the electronics inside should never be manipulated.

This field meter should only be used for the purposes described and only in combination with supplied or recommended accessories.

Measurement Instructions

Getting started

Attach the new battery to the battery clip and place it back into the battery compartment. While putting the battery back into the compartment, ensure that none of the battery leads gets trapped between the battery and some protruding part of the circuit board. If this should happen the cover will not slide back into place properly.

Preparations Prior to Testing

1. Check the field meter according to the instructions laid out under "Getting Started".
2. By means of turning off the main circuit breaker in the main panel, it is possible to determine which of the fields are caused from inside the house and which ones are from the outside, such as high-tension power lines, railway trails, pole-mounted or surface transformers as well as neighboring houses and apartments. If external fields are suspected, their sources can be traced by moving the field meter in the direction of the highest readings.
3. When performing an EMR survey in homes or at workplaces, all typical electric appliances and electronic devices should be turned on, including those that come on only temporarily such as refrigerators or storage space heaters (eg. in adjoining rooms). By turning the various appliances off and on, it is possible to locate the most important field sources.
4. A sketch of the place to be measured, that shows the corresponding testing results, allows for a later analysis of the situation. Thus, appropriate remediation strategies can be assigned.
5. Ideally, all measurements are to be repeated during various times of the day and on different days of the week in order to identify fluctuations.
6. The additional sound signal that is proportional to the field strength makes the detection of field sources easy.

Measurement Instructions - AC Electric Fields

According to relevant guidelines (TCO, MPR II, TÜV), prior to any electric field testing the field meter must be connected to ground potential through the supplied grounding cable in order to obtain reliable, reproducible testing results. Without a proper connection to ground potential no reliable statements on AC electric fields can be made..

Grounding the Field Meter and the Person Performing the Testing



pic. 01

Unvarnished metal piping for water, gas or heating can be used to connect the grounding cable with its grounding clip. As an alternative, a licensed electrician could use an alligator clip to establish a grounding connection through the grounding conductor in a grounded outlet.

Warning: If the phase conductor is touched, an electric shock most likely will result.



pic. 02

Insert the jack plug of the grounding lead into the dedicated socket ("grounding/Erdung", "grounding icon") and at the same time run the grounding cable along the side the case to the back.

Caution: Make sure that neither the grounding cable nor the users hand is in the front of the instrument.

A grounding rod to be driven into the soil and a bracket for bigger pipes can be obtained at our Distributor:
 Enviratest 24 Aberdeen Ave Hamilton, ON Canada L8P 2N5 or
 at www.enviratest.com

2. Positioning of the Field Meter for AC Electric Field Testing

The field meter is calibrated for measurements taken in close proximity to the body. The field sources located behind the field meter are shielded through the body and thus misleading concentrations of field lines onto the electric field sensor are avoided. Therefore, try to avoid taking measurements with a stretched-out arm. In general, this would lead to higher testing results.

3. AC Electric Field Testing

Turn on the field meter and set the switch "Field Type/Feldart" to "E" for AC electric field.

FDuring testing always ensure that the grounding runs to the back of the case and that the person performing the survey, as well as anybody else present, is located behind the field meter.

Keep the field meter close to your body. The further away the instrument is held or even if it is put down, the more the testing results tend to become altered into the higher range. Either point to the suspected field source or, - if no such concrete source is known, - check the space systematically. Proceed as follows:

- First of all, move slowly through the room to be measured.
- Stop frequently and take measurements pointing to the back, to the left, to the right and to the ceiling. Always keep in mind that the grounding cable must run to the back of the instrument.
- Move in the direction of the highest reading in order to identify the field source.
- In the case of places where people spend substantial amounts of time, such as in bed or at a workplace, check all directions as mentioned above and make note of the orientation of the field meter at maximum readings. In such a case, a reference measurement of the absolute value should be taken as close to the body as possible.
- In the case of places where people spend substantial amounts of time, such as in bed or at a workplace, check all directions as mentioned above and make note of the orientation of the field meter at maximum readings. In such a case, a reference measurement of the absolute value should be taken as close to the body as possible.⁰²¹

When the field meter is placed on a tripod or on a table, it is necessary to also place a person 5 cm (2") behind the instrument to obtain accurate measurements. For reproducible measurements, a metal plate (50 cm x 50 cm) is required to be orthogonal and centered 5 cm behind the instrument.

An EMR survey of sleeping areas should include measurements made under "sleep conditions," with all electrical equipment turned off. Under certain circumstances the electric field can even increase after turning off electrical equipment, due to intensification of other sources.

**Recommended Exposure Limit AC electric fields:
Below 10 V/m, preferably below 1 V/m (at 50/60 Hz).**

AC Magnetic Field Testing:

Turn on the field meter and set the switch "Field Type/Feldart" to "M" for AC magnetic field.

For reliable measurements of AC magnetic fields, neither the field meter nor the person performing the measurements needs to be grounded. Other persons or mass potentials in the vicinity of the field meter do not affect the testing results.


If a field source is suspected, point in that direction, otherwise check the space systematically. Proceed as follows:

- First of all, move slowly through the room to be measured. The magnetic sensor is positioned in such a way in the instrument that most typical field sources in residential settings are detected as long as the field meter is held horizontally. In addition, all three dimensions should be checked from time to time as shown in the pictures 03 - 05.
- In practice, the identification of a field source has proven to be most effective by locating the direction of the highest reading first. Then follow the direction, which continues to show increasing measurement values. Simply keep the field meter aligned in the direction of the maximum readings. For an accurate measurement, however, hold the instrument very steady or put it down at a relevant measurement point.
- In places of long duration such as the work place, sitting room and the bedroom, all three dimensions of AC magnetic fields should be checked each time. Proceed as follows.

Accurate Measurement of the Magnetic Field Strength in the Presence of Several Field Sources

In this event, it is necessary to take three separate measurements and record the readings. The field meter should be held as shown in the pictures: point to the front (Picture 03), to the ceiling (Picture 04) and to the side so that it is perpendicular to the front axis (Picture 05).

Important: Let the display settle for 2 seconds after every change of direction.

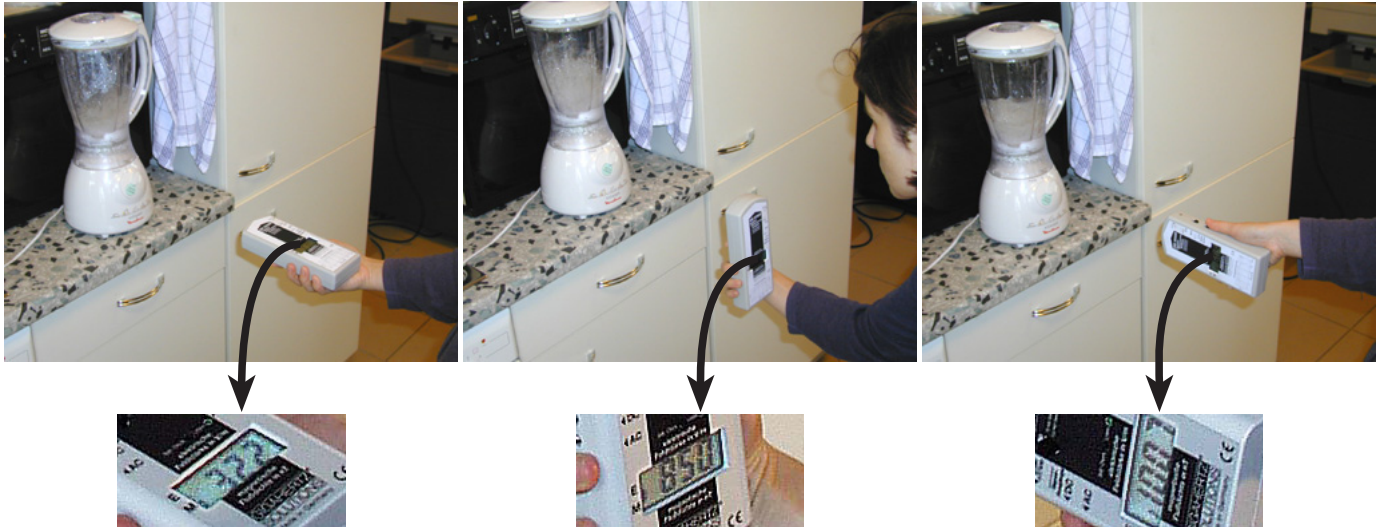

pic. 03

pic. 04

Pic. 05

**Recommended Exposure Limit AC magnetic fields:
 Below 200 nT, preferably below 20 nT (at 50/60 Hz).**


Rough Estimation of resulting Magnetic Field Strength

Reading on Display	estimated resulting magnetic field strength
- One high, two low readings	~ highest reading
- Two higher, one lower reading	~ highest reading + half of 2 nd highest reading
- Three roughly equal readings	~ 1.5 times highest reading

The resultant, total magnetic field strength (the sum of the single field strengths, 3-D Measurement) can be accurately calculated according to the following equation

Resultant Field Strength = Square root of (x² + y² + z²)

Picture 06 illustrates the direction of the resultant field, which is also called "substitute field." The photos for pictures 03 through 05, showing the single measurements of the three dimensions, as well as picture 07 were taken in a kitchen during a typical testing session. By inserting the display values in the above equation, the result would come very close to the value which is displayed in picture 07. There, the field meter is held perpendicular to the resultant field.

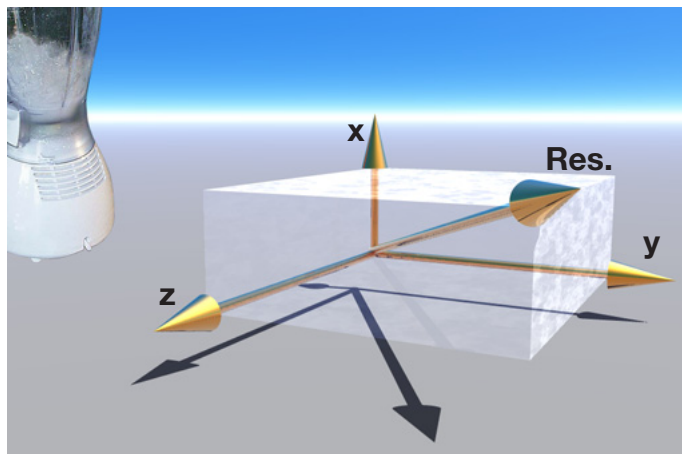

Pic. 06



Pic. 07

Auto-Power-Off, Low batt.

This function conserves energy and extends the total operating time.

1. In the case of the field meter not being turned off or if it is accidentally turned on during transportation, it will automatically be shut off after 40 minutes of continuous use.
2. When two dots appear in the center of the display (low batt.), the field meter will be turned off after 3 min. in order to avoid measurement errors.

Tone - signal

This instrument has a tone signal which works proportional to the field strengths. To work in this mode set the ON / OFF switch to the speaker symbol.

Contact:

Germany

Gigahertz Solutions GmbH
Muehlsteig 16
D - 90579 Langenzenn
Phone +49 (9101) 9093-0
Fax +49 (9101) 9093-23
www.gigahertz-solutions.de

Canada and USA

Enviratest Inc.
24 Aberdeen Ave
Hamilton, ON Canada
L8P 2N5
www.enviratest.com

ME 3030B Dual Function - Gauss/Tesla meter for AC electric and AC magnetic fields 16 Hertz to 2 kilohertz

Reliable Technology - affordable price

In its price class, our digital electric/magnetic field analyzer ME3030B sets new standards regarding technical data. Comparable performance features can only be found in high end expensive professional measuring technology.

Features.

- Measures AC magnetic and AC electric fields.
- Flat frequency response 16.5 - 2000 Hertz.
- High sensitivity starting at 1 nT / 1 V/m.
- High accuracy < +/- 2% at 100 nT or 100 V/m.

Versatile application


Since the propagation of the electric and the magnetic field is different, it is necessary to investigate both fields.

Often magnetic fields have their origin outside of the house (i.e. high tension power lines, transformers)

Magnetic fields penetrate walls almost without resistance.

Electric fields are being discharged to the neutral ground.

With the ME 3030B both fields can be measured and investigated.

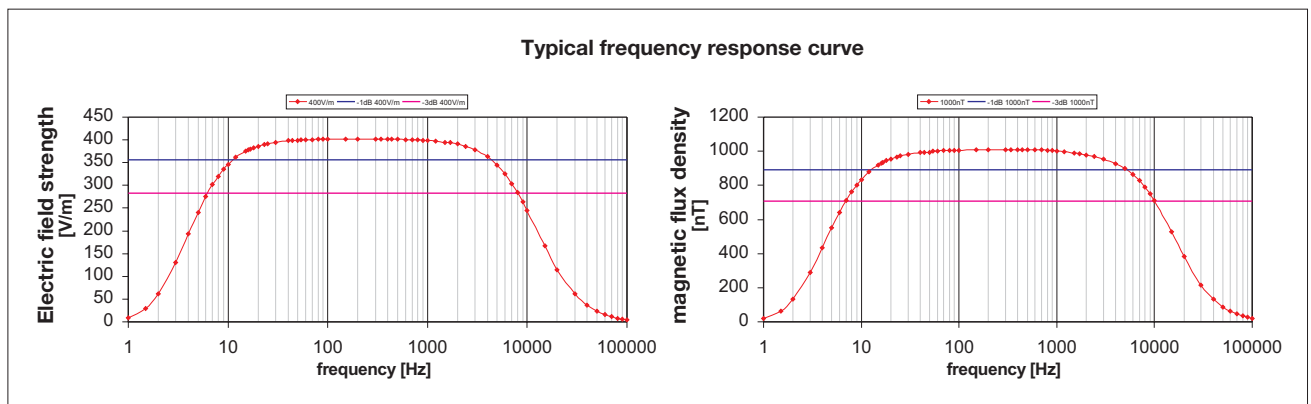

Technical data

Measuring procedures according to the international. Recognized standards of workstations (TCO and MPR):

Magnetic flux density, one-dimensional in Nanotesla.

- range 2000 nT, resolution 1 nT.

Electric field strength against ground potential in Volt/meter.

- range 2000 V/m, resolution 1 V/m.
- grounding cable included.

Accuracy: +/- 2% , +/- 20 digits at 50 Hz, 20 Celsius and 45% relative humidity.

Flat frequency response at least from 16 Hz to 2 kHz (better than - 2 dB).

Tone signal proportional to field strength.

3.5 - digit LCD easy to read display, indication of field type being measured.

Dimensions 74 x 180 x 32 cm, weight appr. 175 grams.

Gebrauchsanleitung und Hintergrundinfos zum Thema "Elektromog" sowie praktische Hinweise zur Reduktion der Belastung im Lieferumfang enthalten.

Power supply

9 Volt E - block battery, operating time

24 - 36 hours according to the mode of operation.

Low batt. - display and auto power off function.

Guaranteed Quality

Innovative electronics, patented technology.

Durable precision through self calibrating circuit elements.

Made in Germany, state of the art SMD

Manufacturing process.

High end components, FR4 material and reproducible manufacturing methods.

2 Years Guarantee on manufacturing defects.